

FIRECLASS FC700 Panels - replacement insert

Introduction

This guide provides information to help you use the insert pack for the FIRECLASS FC700 range of panels. The guide provides a general overview of the insert pack's Graphical User Interface (GUI), and menu icons.

Menu icons









Icon	Description
	Fire
	Fault
	Disabled
	Test
	Power On
	Mains Fault
	System Fault
	Day Mode

Table 1: Menu Icons

Status LEDs


LEDs	Description
	<p>The General Status LEDs light to alert you to unusual conditions. The General Status LEDs are:</p> <ul style="list-style-type: none"> ■ Fire (red) ■ Fault (yellow) ■ Disabled (yellow) ■ Test (yellow)

Table 2: Status LEDs

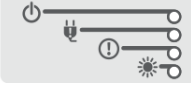



 







 
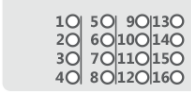
LEDs	Description
	<p>The Panel LEDs light to alert you that the panel is ON or to alert you to unusual conditions. The Panel LEDs are:</p> <ul style="list-style-type: none"> ■ Power On (green and lit any-time the panel is ON) ■ Mains Fault (yellow) ■ System Fault (yellow) ■ Day Mode (yellow)
	<p>The Sounder LEDs light to alert you to unusual conditions affecting the sounder devices connected to the panel. The Sounder LEDs are:</p> <ul style="list-style-type: none"> ■  Sounder Activated (red) ■  Fault (yellow) ■  Disabled (yellow)
	<p>The Signalling LEDs light to alert you to unusual conditions affecting the signalling devices connected to the panel. The Signalling LEDs are:</p> <ul style="list-style-type: none"> ■  Fire Brigade Signalling Activated (red) ■  Fault (yellow) ■  Disabled (yellow)
	<p>The Protection LEDs light to alert you to unusual conditions affecting the protection devices connected to the panel.</p> <ul style="list-style-type: none"> ■  Protection equipment Activated (red) ■  Fault (yellow) ■  Disabled (yellow)
	<p>The Zone status LEDs light red to alert you if there is a fire in the associated zone.</p>

Table 2: Status LEDs



NOTICE: Additional Information

For additional information about the panel, refer to the FIRECLASS FC700 Panels User Manual, 120.515.871_FC-FC700-P-U.